

## HOW-TO PLAY

### BUTTON FUNCTIONALITY

#### 1 EQ/Equalizer

Each press of the EQ button rotates to a new EQ mode.

- NONE = No EQ setting
- LOUD = Overall sound is boosted
- BASS = Bass is boosted
- TREB = Treble is boosted
- CLEAR = High end sound is amplified
- HIFI = Sound is mixed for best performance

#### 2 Power

Turns the Playaway on and off.

- a. Press the POWER button once to turn unit on
- b. Press the POWER button again and hold for 3 seconds to power off - release button after unit counts down and "OFF" appears on the LCD screen

#### 3 Speed (Audiobook Content)

Each press of the SP button rotates to a new speed mode.

- a. HD Audio Playaways have 5 options, older Playaways do not have the slow and slowest speeds
  - SPD = Normal
  - SPD+ = Fast
  - SPD++ = Fastest
  - SPD- = Slow
  - SPD-- = Slowest

 
#### Shuffle Play (Music Content)

- a. If your Playaway is pre-loaded with music content, the SP button enables/disables shuffle play functionality
- b. Pressing the SP button once will enable Shuffle Play mode and cause a randomization of the playback

#### 4 Volume Down

Lowers the volume of the audio.

- a. Each press of the Volume Down button will decrease the volume one level
- b. Press and hold Volume Down to accelerate volume decrease

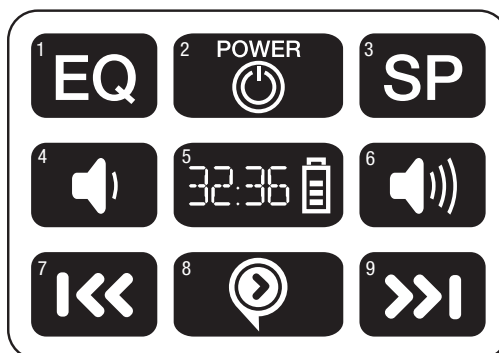

#### 5 LCD Screen

Displays the operating status of the Playaway.

- a. Battery level indicated by battery icon
- b. Displays the speed level
- c. Indicates time remaining in a chapter or track
- d. Asks for reset confirmation on newer Playaways

#### 6 Volume Up

Increases the volume of the audio.

- a. Each press of the Volume Up button will increase the volume one level
- b. Press and hold Volume Up to accelerate volume increase


 

#### 7 Reverse

Moves you backwards through the audio

- a. Press the Reverse button once to reverse one chapter/track
- b. Press and hold the Reverse button to fast rewind

#### 8 Play/Pause

 
Commences and interrupts the audio.

- a. Press the  button once to Play
- b. When in play mode, press the  button again to Pause playing or resume Play
- c. On HD Audio Playaways, while PAUSED, press **SP + I<<** for reset, confirm reset by pressing 

#### 9 Forward

Moves you further ahead through the audio.

- a. Press the Forward button once to forward one chapter/track
- b. Press and hold the Forward button to fast forward

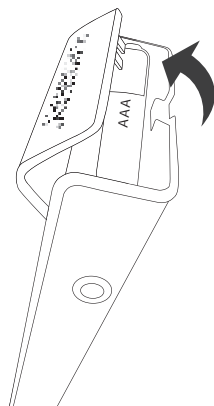

## HOW TO CHANGE THE BATTERY

Locate the battery door at the wide base of the unit. Look for the notch holding the door in place. Firmly using your thumb, push up and away on the notch to open the battery door. Add or change battery and snap battery door back into place.